



# Laying Advices

on FP BOIS products


## PANELLING

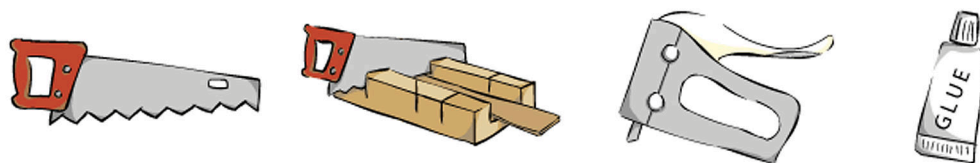

**Recommendation : Use an air stapler.**

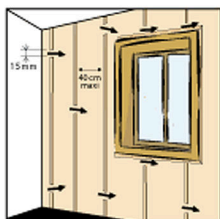


Horizontal laying

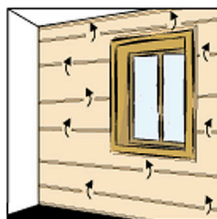


Vertical laying

### STEP 1

Fix (15 x 40mm) battens onto the wall with a maximum gap of 40cm between them. Do not forget to surround doors and windows. Leave space for air to circulate between the batten assemblies for passing the necessary ducts and cables.

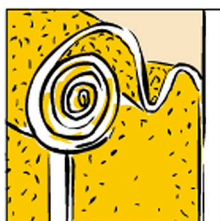


Horizontal laying

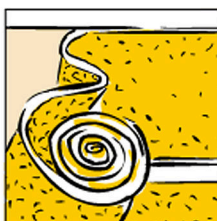


Vertical laying

### STEP 2

Insert glass wool or another material between the battens to insulate or restore your walls. Plan to use battens that are thicker than the glass wool (15mm thicker).

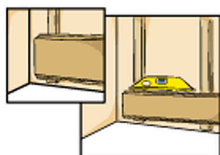


Horizontal laying

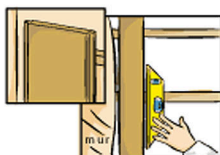


Vertical laying

### STEP 3

Take the utmost care when laying the first strip (it will determine the final result).

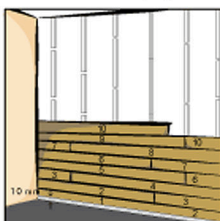


Horizontal laying

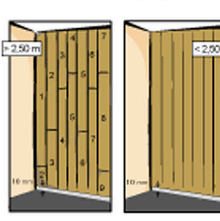

Vertical laying


### STEP 4

Leave 10mm between the panelling and the floor

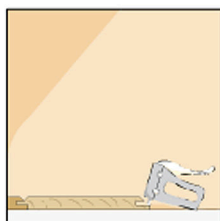

### STEP 5

Fix the strips by nailing (20 x 1.2mm) or stapling (13 x 16mm). We advise against laying with clips.

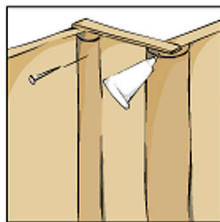

### STEP 6

Nail or glue the mouldings.

## IMPORTANT



- The product must be unpacked 4 days before laying and stored horizontally in the room where it will be laid ; this room should be maintained in normal conditions of use.
- Plan to lay the panelling after all humidification work and ventilate the room well after laying.
- Plan to lay the panelling at least 20 days after having ensured that the plaster or concrete is dry.
- Comply with the DTU 36.1 standard.